


Installation

XP-WMS8000-S

- Installation Time: About 20 minutes
 - Tools Required: 1/4" Nut-driver, Phillips screwdriver
1. Unplug the AC power from your pinball machine. Remove game backglass. Unplug all display board connecting cables and remove the original display driver board and score displays
 2. Replace the display with your new XPin™ XP-WMS8000 and score displays.
 3. Connect all cables leading from the head to the display board and from the display driver board to the score displays. NOTE: reference the drawings below for proper connection of the ribbon cables. The ribbon cable stripe must be on the side of the header as shown in the drawings.

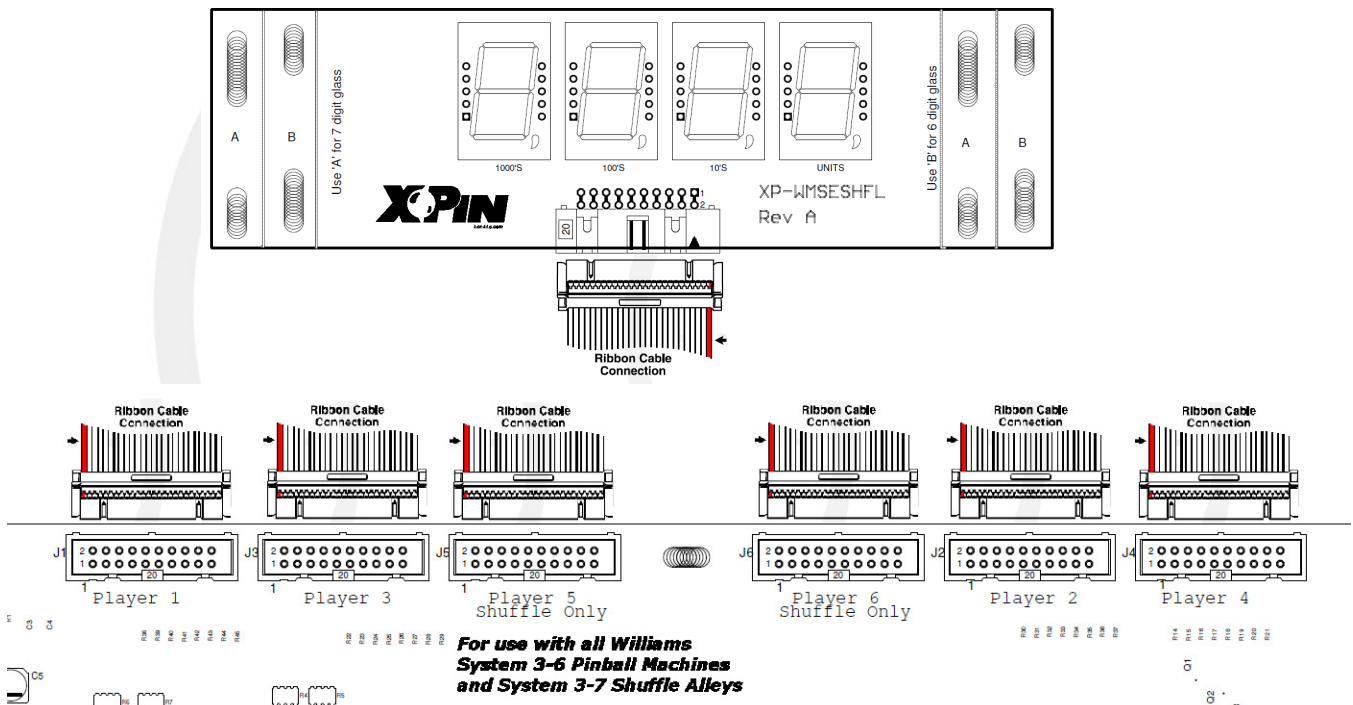

4. It is recommended that you remove the High Voltage fuse from your power supply, as it is no longer needed.
5. If not already in place, attach the foam Foam Light-Blocks on their respective LED displays.
6. The optional grey vinyl is easily installed at this time
7. Double-check all connections, plug in the machine, and turn the game on. The LEDs will light up. Pressing the TEST pushbutton on the XP-WMS8000 board will illuminate all segments of all displays. This indicates that all boards and cables in the XPin™ System are operating correctly. Use the thumbwheel BRIGHTNESS control on the board to set your preferred illumination level.

