



# Installation

## XP-WPC95HV



— **Installation Time:** About 5 minutes, Depending on Game Title

— **Tools Required:** None

1. Unplug the AC power from your pinball machine. Remove game backglass.
2. Disconnect connections at J604 and J605 from the WPCAV board.
3. Remove Fuses F601 and F602 from the WPCAV board.
4. Install the MDL 0.5A fuse (1/2 Amp Slow Blow Fuse) onto the XP-WPC95HV board.
5. Install the XP-WPC95HV board on the same connections J604 and J605.
6. Install the associated cables for J604 and J605 on the XP-WPCHV board.
7. Replace backglass.
8. PLAY PINBALL!

